

**Table 8-6: 3-FIB troubleshooting**

<b>Symptom</b>	<b>Possible causes</b>
No LED activity on any fiber optic port	<ol style="list-style-type: none"> <li>1. Ribbon cable between interface and electronics card loose, Improperly installed, or broken.</li> <li>2. Electronics card not properly seated in J2 of CPU.</li> </ol>
No LED activity on “IN” fiber optic port	<ol style="list-style-type: none"> <li>1. Incorrect cable connected to port.</li> </ol>
Steady on LED on “IN” fiber optic port	<ol style="list-style-type: none"> <li>1. Jumper JP1 left in test position.</li> </ol>

## Signature Controller modules

Please refer to Signature Component Troubleshooting Chapter for complete information on Signature related troubleshooting.

## Control / display modules

The information in this section applies to the following models of control / display modules:

3-12/1RY	3-2RY	3-12/2RY
3-12SG	3-12SR	3-12SY
3-12/SIGY	3-12/S1RY	3-12/AS2Y
3-24G	3-24R	3-24Y
3-6/282Y	3-6/28102Y	3-6/8102Y