

Figure 6-22 shows how to connect a laptop computer to the RS-232 terminals on a PS6 card. Connecting a laptop computer in this manner requires that you use programming cable P/N 260097, ordered separately.

**Note:** Connecting a laptop computer to the RS-232 terminals may cause a ground fault. The ground fault event message goes away when you remove the connection.

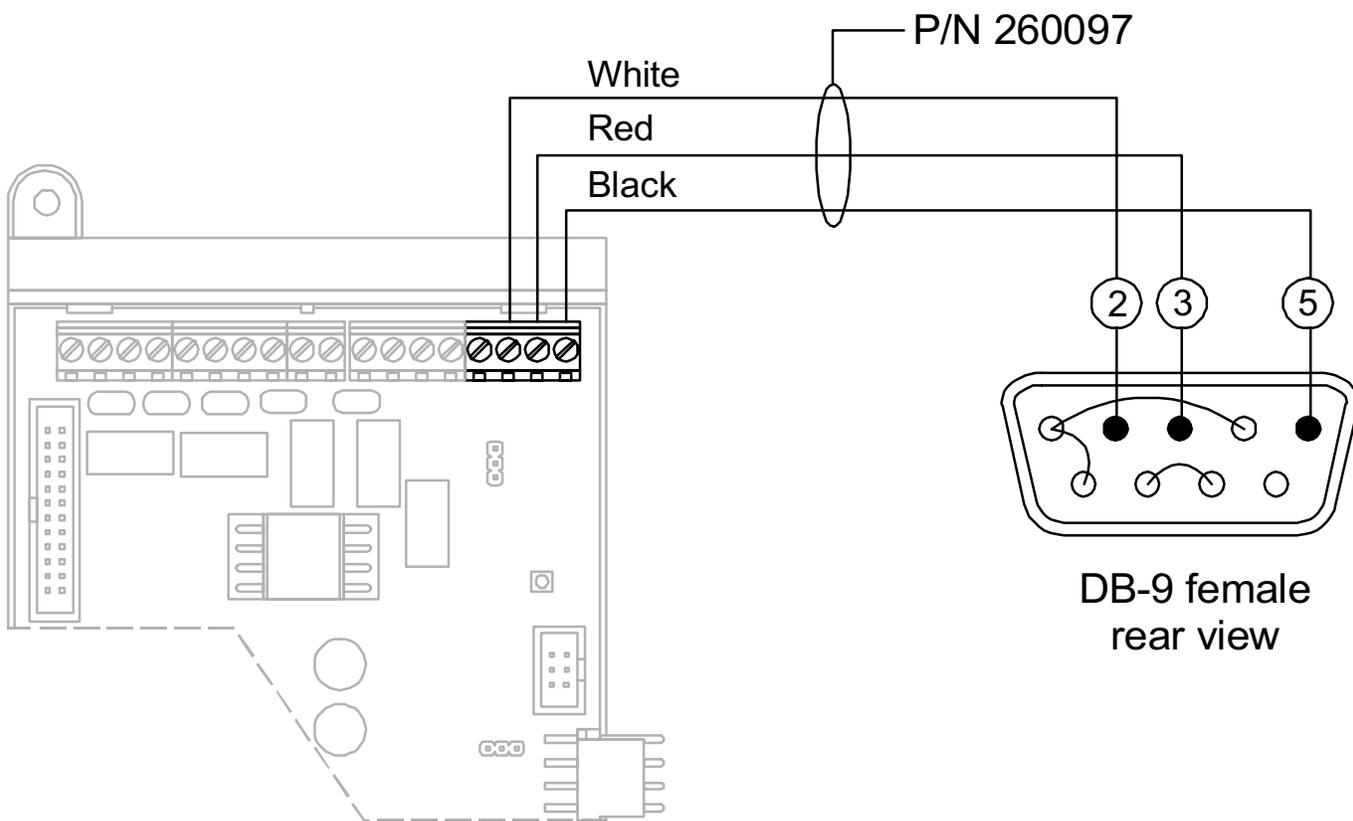


Figure 6-22: Laptop computer connection via the RS-232 terminals

You can also connect a laptop computer to the RJ-12 modular jack on the CPU/Display Unit. Connecting a laptop computer in this manner requires that you use programming cable Model no. PROGCABLE-1, ordered separately.